

MANUAL CÂMERA IP

CX-2620D / CX-2630

Rev.02



CX-2620D



CX-2630



Lente 3.6mm Troca automática de filtro



Resolução em 3MP





Sumário

1. Introdução1
2. Características
2.1 Parâmetros de operação3
3 Operando o sistema
3.1 Acessando configuração de IP / REDE4
3.2 Alteração do IP da câmera5
3.3 Acesso pelo navegador6
4 Menu de configuração7
4.1 Configurações gerais
4.2 Configuração de data de hora8
4.3 Configuração de Manutenção8
4.4 Configuração REDE TCP/IP9
4.5 Configuração de Portas9
4.6 Configuração E-mail / Recebimento10
4.7 Configuração Video/Audio11
4.8 Configuração/Ajusta de Imagem11
4.9 Configuração de Segurança:12
4.10 Configuração de eventos / movimento12
5 Adicionar câmera no aplicativo13
5.1 Configuração P2P13
5.2 Adicionando câmera pelo QRCODE14
5.3 Adicionando câmera no aplicativo Manualmente15



1. Introdução

Você adquiriu uma câmera IP Citrox, que conta com uma estável tecnologia e possui características para uma prática instalação.

A câmera trabalha com interface de Rede e conta com o formato de compressão de vídeo H.264/H.265 e taxa variável de qualidade, permitindo um melhor desempenho e se adaptando a necessidade de transmissão da sua Rede.

Através deste produto, você poderá trabalhar com diversos equipamentos de segurança eletrônica, tais como: softwares CMS, HVRs, NVR. Assim, irá possibilitar a visualização e gravação da câmera em todo tempo e em qualquer lugar.



2. Características

Modelo / Característica	CX-2620D	CX-2630		
Tipo de sensor	CMOS 1/2.8"			
Resolução	2304(H) X 1296(V) 3MP			
Iluminação mínima	Cor: 0,6 Lux			
Taxa de saída	Fluxo de 1 a 7Mbps			
Taxa de quadros (fps)	1 a 20fps			
Saída da imagem	Main stream: 2304 X 1296	6 – 1920 X 1080		
Processamento de vídeo	H.264 e H.265			
Sinal de vídeo	NTSC / PAL			
Protocolo ONVIF	Sim – 2.6 Padrão S			
Protocolos de rede	RTSP / DHCP / NTP / O	NVIF / SMTP / FTP / P2P		
Alcance do LED	20 metros	30 metros		
Lente	3.6mm	3.6mm		
Alimentação	12Vdc/ 600mA			
Proteção	IP66 – Resistente a sol e chuva			
Interface de rede	RJ45 (10 – 100Mbps adaptativo)			
POE (48Vdc)	Sim	Sim		
Temperatura de operação	0°C a +45°C			





2.1 Parâmetros de operação

- Permite configuração através do navegador: Internet Explorer, Mozilla Firefox, Google Chrome entre outros.
- Compatível com o protocolo ONVIF versão 2.6 do perfil S, permitindo a conexão nos principais dispositivos de gravação de mercado.
- Possui proteção por senha, o que permite a restrição de funcionalidades a partir da política de usuários.



3 Operando o sistema

3.1 Acessando configuração de IP / REDE

Busque o IP da Câmera utilizando o software ONVIF Device Manager.

O IP de fábrica é: **DHCP (automático).** Máscara de sub-rede: **255.255.255.0.**

ONVIF Device Manager v2.2.250

Name Password	Log in 🖌 Remember
Device list 《	
Name, location or address Cancel	J
ONVIF_CAMERA	
Firmware 1.0.4-20190326Z1S Address 192.168.0.166 Location country/China	



3.2 Alteração do IP da câmera.

• Selecionar a opção Network settings

ONVIF Device Manager v2.2.250				
Name Password	Log in 🛛 Remember			
Device list 《	ONVIF_CAMERA		Network settings	
Name, location or address Cancel ONVIF_CAMERA Firmware 1.0.4-20190326Z1S Address 192.168.0.131 Location country/China	Οηνιε	Identification Time settings Maintenance Network settings User management Certificates Web page Events	DHCP: IP Address: Subnet mask: Default gateway: Host name:	On
	NVT	Refresh	DNS:	DHCP - 1.1.1.1; 208.67.222.222
	VideoSourceToken: PROFIL	.E_000	NTP servers:	Manual 🔻 pool.ntp.org
	NO IMAGE	Live video Video streaming Imaging settings Analytics Rules PTZ control Profiles	HTTP ports: HTTPS ports: RTSP ports: Enable zero config: ONVIF discovery mode:	Enable V 80 Disable V Enable V 554 Not supported Discoverable V Apply Cancel

Selecionada esta opção irá permitir desativar o DCHP da câmera e atribuir um IP.





3.3 Acesso pelo navegador

• Insira o IP da câmera no navegador.

× 📑				
			User Login	
			User Login	
		User Name	User Login admin	
		User Name Password	User Login	
		User Name Password Preview Stream	User Login admin MainStream	
		User Name Password Preview Stream Language	User Login admin MainStream English	 >
		User Name Password Preview Stream Language	User Login admin MainStream English	
		User Name Password Preview Stream Language Loj	User Login admin MainStream English	↓ ↓ ↓ set
		User Name Password Preview Stream Language Log	User Login admin MainStream English gin Res	→ →
		User Name Password Preview Stream Language Lot	User Login admin MainStream English gin Res	v v
		User Name Password Preview Stream Language Log	User Login admin MainStream English Res	

Usuário: admin

Senha:

Iniciar o acesso no botão " Login "

• Visualização da imagem no navegador.





4 Menu de configuração

 O menu de configurações do sistema, permite navegar e alterar funções por todos os campos da câmera.



4.1 Configurações gerais

• Camera config> OSD Config : Name:



Name: Alterar o nome da câmera.



4.2 Configuração de data de hora.

	smain.html	
Live	playback Remote Se	tting Local Setting Logout
🖳 Camera Config	Date/time DST	
Network Config	Date/time s	Save
Code Config	Time format	24Hour
🗿 Alarm Config	Device date time NTP Timing	2019-10-22 10:42:09 Sync with PC date time Open
G System Config	Time zone	
Time Setting	Sync Interval Server Address	01 V Hour pool.ntp.org
User Management		
Device Info		

Time Setting – **Time Zone**: Alterar a região e local de horário. Time Setting – **Device date time**: Horário definido pela internet.

4.3 Configuração de Manutenção.

Attp://192.168.0.166/rs	n.html	
😢 IP CAMERA 🛛 🗙 🗌		
Live	playback Remote Setting Local Setting	Logout
📕 Camera Config	Restore Default Save	
Metwork Config	Simple recovery Full recovery	
Code Config	Reboot	
alarm Config		
System Config		
System Maintain		
Activation code		
Auto Reboot		
Firmware Update		
Restore Default		

System Maintain > Simple recovery : Redefina todos os parâmetros, exceto os parâmetros IP e as informações do usuário, para as configurações padrão. System Maintain >Full recovery: Restaurar todos os parâmetros para as configurações padrão.

System Maintain > Reboot : Comando para reiniciar a câmera .



4.4 Configuração REDE TCP/IP.

C () () http://192.168.0.166/rs	main.html		
Live	playback Remote	Setting Local Setting Logout	
Camera Config	Network Config	Save	
Network Config	IP Туре	DHCP	
Hetwork coning	Auto IP	Enable	
Network Config	IP Address	192.168.0.166	
Port Config	Subnet Mask	255.255.255.0	
PPPoE Config	Gateway	192.168.0.1	
Email Config	Primary DNS	1.1.1.1	
FTP Config	Alternative DNS	208.67.222.222	
DDNS Config	MAC Address	5a:58:88:c7:a3:57	
RTSP Config			
UPNP Config			
P2P Config			

4.5 Configuração de Portas.

	n.html			
🧟 IP CAMERA 🛛 🗙 📑				
Live	playback	te Setting Local Setting	Logout	
Eamera Config	Port Config	Save		
Network Config	HTTP Port	80		
Network Config	Media Port	6066		
Port Config PPPoE Config	Change the parameters will r	estart.		
Emoil Config				
C () () http://192.168.0.166/rsmai	in.html			
Live	playback	te Setting Local Setting	Logout	
Camera Config	RTSP Config	Save		
Network Config	RTSP Port	554		
Network Config	MainStream rtsp://IP:Port/li SubStream rtsp://IP:Port/liv	ve/0/MAIN e/0/SUB		
Port Config				
PPPoE Config				
Email Config				
FTP Config				
DDNS Config				
RTSP Config				
LIBNB Config				





← → 🛛 http://192.168.0.131,	/rsmain.html				
IP CAMERA ×			_		_
Live	playback	Remote Setting	Local Setting	Logout	
💻 Camera Config	Email Confi	g Save	e]		
• Network Config	Email Config	Dis	able		~
Network Config					
Port Config					
PPPoE Config					
Email Config					
FTP Config					
DDNS Config					
RTSP Config					
UPNP Config					
P2P Config					
📡 Code Config					
🗿 Alarm Config					
Kostem Config					
💥 System Maintain					
System Maintain	rsmain.html				
System Maintain System Maintain Control of the system Maintain	rsmain.html	Remote Setting	Local Setting	Logout	
System Maintain System Maintain Compared to the system Maintai	rsmain.html playback Email Config	Remote Setting	Local Setting	Logout	
System Maintain System Maintain Camera Config Camera Config Camera Config	rsmain.html playback Email Config Email Config	Remote Setting g Save	Local Setting	Logout	
System Maintain System Maintain System Maintain Camera Config Camera Config Network Config	rsmain.html playback Email Config Email Config Email Encryption	Remote Setting g Save n TLS	Local Setting	Logout	
System Maintain System Maintain Performance System Maintain Performance Performance Performance Performance Performa	rsmain.html playback Email Config Email Config Email Config SMTP Port	Remote Setting g Save n Enab n TLS 465	Local Setting	Logout	
System Maintain System Maintain Control System Maintain System Maintai	rsmain.html playback Email Config Email Config Email Encryption SMTP Port SMTP Server	Remote Setting g Save n Enab n TLS 465 smtp.	Local Setting	Logout	
System Maintain Syste	/rsmain.html /rsmain.html Playback Email Config Email Config Email Encryption SMTP Port SMTP Server Sender Email	Remote Setting g Save n TLS 465 smtp. citrox	Local Setting le gmail.com @citrox.com.br	Logout	
System Maintain IP CAMERA Camera Config Image: Commera Config Image: Config Image: Config Image: Config Image: Config Image: Config Image: Config	/rsmain.html /rsmain.html playback Email Config Email Config Email Config SmTP Port SMTP Server Sender Email Sender Pwd	Remote Setting g Save n Enab n TLS 465 smtp. citrox	Local Setting le gmail.com @citrox.com.br	Logout	
System Maintain IP CAMERA Camera Config IP CAMERA Live IP CAMERA Live Port Config Port Config Port Config Port Config IP CAMERA Port Config FTP Config FTP Config	rsmain.html rsmain.html playback Email Config Email Config Email Config Email Encrybion SMTP Port SMTP Server Sender Email Sender Email Receiver Email	Remote Setting g Save n Enab n TLS 465 smtp. citrox	Local Setting ie gmail.com @citrox.com.br 	Logout	
System Maintain IP CAMERA Live IP CAMERA Live Camera Config Image: Strategy of the strategy	rsmain.html rsmain.html rsmain.html rsmain.html rsmain.html rsmain.comfig rsmain.comfi	Remote Setting g Save [Enab n TLS 465 (itrox citrox citrox	Local Setting gmail com @citrox.com.br	Logout	
System Maintain IP CAMERA	/rsmain.html Playback Playback Email Config Email Config Email Config Email Encryption SMTP Port SMTP Server Sender Email Sender Pwd Receiver Email Receiver Email	Remote Setting g Save g Enab n TLS 465 5 Cettrox 2 Cettr	Local Setting le gmail.com @citrox.com.br	Logout	
System Maintain IP CAMERA Live Live Ramera Config IP CAMERA Network Config Port Config Port Config IP CAMERA Port Config IP CONFIG IP CONFIG IP CONFIG IP CONFIG IP CONFIG IP DNS Config IP NP Config IP NP Config	rsmain.html rsmain.html playback Email Config Email Config Email Config Email Config Email Config SMTP Port SMTP Port SMTP Server Sender Email Sender Pwd Receiver Email2 Receiver Email2 Receiver Email3 Theme	Remote Setting g Save f Enab n f TLS f 465 f from from from from from from from fro	Local Setting	Logout	✓ ✓ ✓ ↓ ↓ ↓ ↓ ↓ ↓
System Maintain IP CAMERA IP CAMERA <th>rsmain.html rsmain.html playback Email Config Email Config Email Config Email Encryption SMTP Port Sender Email Sender Email Receiver Email3 Receiver Email3 Theme</th> <th>Remote Setting g Save f Enab n TLS f 65 f 65</th> <th>Local Setting</th> <th>Logout</th> <th>✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓</th>	rsmain.html rsmain.html playback Email Config Email Config Email Config Email Encryption SMTP Port Sender Email Sender Email Receiver Email3 Receiver Email3 Theme	Remote Setting g Save f Enab n TLS f 65	Local Setting	Logout	✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓
System Maintain System Maintain <th>rsmain.html rsmain.html playback Email Config Email Config Email Config Email Encryption SMTP Port Sender Email Sender Pwd Receiver Email3 Theme Content</th> <th>Remote Setting g Save g Enab n TLS a 465 smtp. citrox citrox citrox a citrox a citrox a citrox b citrox a citrox a citrox b citrox citrox citrox a citrox b citrox citrox citrox</th> <th>Local Setting</th> <th>entered. Chinese cha</th> <th>✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓</th>	rsmain.html rsmain.html playback Email Config Email Config Email Config Email Encryption SMTP Port Sender Email Sender Pwd Receiver Email3 Theme Content	Remote Setting g Save g Enab n TLS a 465 smtp. citrox citrox citrox a citrox a citrox a citrox b citrox a citrox a citrox b citrox citrox citrox a citrox b citrox citrox citrox	Local Setting	entered. Chinese cha	✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓
System Maintain System Maintain IP CAMERA Live IP CAMERA Live IP CAMERA Network Config IP Poel Config PPOE Config PPOE Config IP Config IP Config IP POP POP POP POP POP POP POP POP	rsmain.html rsmain.html rsmain.html Playback Fmail Config Email Config Email Config Email Encryption SMTP Port SmTP Port Sender Email Sender Email Sender Pwd Receiver Email2 Receiver Email2 Receiver Email2 Theme Content Attached Snapsi	Remote Setting g Save g Enab n TLS 465 5 5 6 6 7 7 7 7 7 7 7 7 7 7 7 7 7 7 7	Local Setting gmail.com @citrox.com.br @citrox.com.br @citrox.com.br	Logout	✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓ ✓
System Maintain System Maintain System Maintain System Maintain System Maintain System Maintain System Maintain System Maintain System Maintain System Maintain System Maintain System Maintain System Maintain System Maintain System Maintain Live Live System Config System Config ODNS Config UPNP Config UPNP Config P2P Config Sode Config System Config	rsmain.html rsmain.html playback Email Config Email Config Email Config Email Config Email Config Email Config SMTP Port SMTP Server Sender Email Receiver Email2 Receiver Email2 Receiver Email3 Theme Content Attached Snapsi Snap interval	Remote Setting g Save g g Enab n TLS 465 5 Citrox c	Local Setting	entered. Chinese cha	
System Maintain Image: System Config Image: System Config Image: System Config	rsmain.html rsmain.html playback Email Config Email Config Email Config Email Encryptor SmTP Port SmTP Server Sender Email Sender Pwd Receiver Email3 Theme Content Attached Snapsi Snap interval	Remote Setting g Save f Enab n f TLS f Enab n f Citrox f	Local Setting	entered. Chinese cha	

4.6 Configuração E-mail / Recebimento.

4.7 Configuração Video/Audio

	n.html		
Live	playback Remote Se	etting Local Setting Logout	
Camera Config	Main Stream St	ubStream	
Network Config	MainStream	Save Video & Audio Stream	
Code Config	Video Codec	H.265	
Code Parameters	Resolution	3MP(2304*1296)	~
Audio Parameters	I frame interval	80	(1-200)
Capture configuration	FPS Bate Control		
Alarm Config	Quality	Medium	
System Config			
X System Maintain			

-MainStream/SubStream: Definir a qualidade da imagem em HD / SD. -Resolution: Alterar resolução da câmera.

-I Frame Interval: Define intervalo de frames.

	in.html				
🖸 IP CAMERA 🛛 🗙 📑					
Live	playback	Remote Sett	ing Local Setting	Logout	
_					
Camera Config	Image Cont	rol	Default		
OSD Config	Smart Night		Common vision		~
Image Control	Image Mode		Faceless exposure mo	ode	~
Privacy Zone	IR-CUT Mode		Auto (passive mode)		~
	IR-CUT Delay		•		3
	IR-CUT Reverse	e	Close		∽
📡 Code Config	Brightness		50		2017-10-24 2115-10 C
<u> </u>	Saturation		50		1000
🎒 Alarm Config	Hue	— —	50		
	Sharpness		50		
	Flicker Control	Manual			
🔀 System Maintain	Time Exposure	Auto	✓		
	Gain	Auto			
	White Balance	Auto			-
	3D Noise Reduction	Auto			
	BLC	Close			
	WDR	Auto			
	Image Flip	Close			

4.8 Configuração/Ajusta de Imagem

Caso tenha Problema na Imagem Alterar Flicker Control de 50Hz para 60Hz.



4.9 Configuração de Segurança:

 IP CAMERA IP CAMERA 	smain.html				
Live	playbac	playback Remote S		Local Setting	Logout
Camera Config	liseri	Management		Save	
•	NO.	User Name	Enable	Disable	User Name: admin
Network Config	1	admin E			Password
📡 Code Config	2	user1	Disable		Enable/Disable:
	3	user2	Disable		
🗿 Alarm Config	4	user3	Disable		
	5	user4 [Disable	
System Config	6	user5	Disable		
Time Setting					
User Management					
Device Info					
Log Query					
PTZ Setting					
🔀 System Maintain					

User Management: Permite criar ou editar um usuário ou senha.



4.10 Configuração de eventos / movimento.

Motion: Ativar ou desativar o movimento.



5 Adicionar câmera no aplicativo

5.1 Configuração P2P



Scan To Get UID: Adicionar a câmera no aplicativo. **Scan To Download APP:** Baixar aplicativo na loja(P6SPro).





5.2 Adicionando câmera pelo QRCODE







5.3 Adicionando câmera no aplicativo Manualmente

Digite um nome a câmera e o código UID no campo DID do aplicativo, depois de preenchido os dados clicar no canto superior direito (conforme a imagem).



